

Manuale d'uso - Efficienza Energetica / User Manual - Energy Efficiency / Manuel de l'utilisateur - L'efficacité énergétique / Handbuch - Energieeffizienz / Handboek - Energie-efficiëntie Manual - Eficiencia Energética / Manual - Eficiência Energética / Manuell - Energieeffektivitet / Manuell - Energieeffektivitet / Manuaalinen - Energy Efficiency / Manual - Energieeffektivitet Руководство - Энергоэффективность / Käsiiraamat - Energiatõhususe / Rokasgrāmata - Energoefektivitātes

Table with 17 columns: PF, IT, EN, FR, DE, NL, ES, PT, SV, NO, FI, DK, RU, ET, LV. Rows include brand (FABER P1705), energy class (AEchood EEC), efficiency (EEhood FDEhood FDEC LEhood LEC), airflow (GFehood GFEC Qmin Qmax Qboost), power (PEmin SPEmin SPEmax SPEboost P0), standby (Ps), performance (F EEhood Qbep Pbp Qmax Wbep WL Emiddle Lwa), and technical details (WL Emiddle Lwa). Includes detailed technical specifications in multiple languages and a safety section (CONSIGLI PER IL RISPARMIO ENERGIA).

